


Trigonox B

Di-tert-butyl peroxide

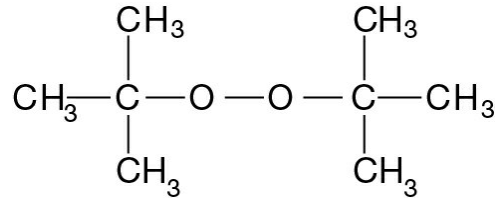

Initiator for (co)polymerization of ethylene, styrene, acrylates and methacrylates.

CAS number
110-05-4

EINECS/ELINCS No.
203-733-6

TSCA status
listed on inventory

Molecular weight
146.2

Active oxygen content
peroxide
10.94%

Specifications

Active oxygen	≥ 10.83 %
Appearance	Clear liquid
Assay	≥ 99.0 %
Color	≤ 30 Pt-Co / APHA
tert-Butyl hydroperoxide	≤ 0.10 %
Viscosity, 20°C	0.9 mPa.s

Characteristics

Density, 20°C	0.800 g/cm ³
Viscosity, 20°C	0.9 mPa.s

Applications

Polymerization of ethylene Trigonox B is an efficient initiator for the production of Low Density Polyethylene (LDPE). It is used both for tubular and autoclave processes. In most cases a combination with other peroxides is used to ensure a broad reactivity range.

Half-life data

The reactivity of an organic peroxide is usually given by its half-life ($t_{1/2}$) at various temperatures. For Trigonox B in chlorobenzene half-life at other temperatures can be calculated by using the equations and constants mentioned below:

0.1 hr	at 164°C (327°F)
1 hr	at 141°C (286°F)
10 hr	at 121°C (250°F)
Formula 1	$k_d = A \cdot e^{-E_a/RT}$
Formula 2	$t^{1/2} = (\ln 2)/k_d$
E_a	153.46 kJ/mole
A	4.20E+15 s ⁻¹
R	8.3142 J/mole·K
T	(273.15+°C) K

Thermal stability

Organic peroxides are thermally unstable substances which may undergo self-accelerating decomposition. The lowest temperature at which self-accelerating decomposition may occur with a substance in the packaging as used for transport is the Self-Accelerating Decomposition Temperature (SADT). The SADT is determined on the basis of the Heat Accumulation Storage Test.

SADT	80°C (176°F)
Method	The Heat Accumulation Storage Test is a recognized test method for the determination of the SADT of organic peroxides (see Recommendations on the Transport of Dangerous Goods, Manual of Tests and Criteria - United Nations, New York and Geneva).

Storage

Due to the relatively unstable nature of organic peroxides, a loss of quality will occur over a period of time. To minimize the loss of quality, Nouryon recommends a maximum storage temperature (T_s max.) for each organic peroxide product.

T_s Max.	40°C (104°F) and
T_s Min.	-30°C (-22°F) to prevent crystallization
Note	When stored according to these recommended storage conditions, Trigonox B will remain within the Nouryon specifications for a period of at least three months after delivery.

Packaging and transport

In North America Trigonox B is packed in non-returnable, five gallon polyethylene containers of 30 lb net weight and steel drums of 100 or 340 lb net weight. In other regions the standard packaging is a 30-liter HDPE can (Nourytainer) for 20 kg peroxide. Delivery in a 200 l steel drum for 150 kg peroxide is also possible in a number of countries. Both packaging and transport meet the international regulations. For the availability of other packed quantities consult your Nouryon representative. Trigonox B is classified as Organic peroxide type E; liquid, Division 5. 2; UN 3107.

Safety and handling

Keep containers tightly closed. Store and handle Trigonox B in a dry well-ventilated place away from sources of heat or ignition and direct sunlight. Never weigh out in the storage room. Avoid contact with reducing agents (e. g. amines), acids, alkalis and heavy metal compounds (e. g. accelerators, driers and metal soaps). Please refer to the Material Safety Data Sheet (MSDS) for detailed information on the safe storage, use and handling of Trigonox B. This information should be thoroughly reviewed prior to acceptance of this product. The MSDS is available at <https://polymerchemistry.nouryon.com>.

Major decomposition products

Acetone, Methane, tert-Butanol

All information concerning this product and/or suggestions for handling and use contained herein are offered in good faith and are believed to be reliable. Nouryon, however, makes no warranty as to accuracy and/or sufficiency of such information and/or suggestions, as to the product's merchantability or fitness for any particular purpose, or that any suggested use will not infringe any patent. Nouryon does not accept any liability whatsoever arising out of the use of or reliance on this information, or out of the use or the performance of the product. Nothing contained herein shall be construed as granting or extending any license under any patent. Customer must determine for himself, by preliminary tests or otherwise, the suitability of this product for his purposes. The information contained herein supersedes all previously issued information on the subject matter covered. The customer may forward, distribute, and/or photocopy this document only if unaltered and complete, including all of its headers and footers, and should refrain from any unauthorized use. Don't copy this document to a website.

Trigonox and Nourytainer are registered trademarks of Nouryon Chemicals B. V. or affiliates in one or more territories.

Contact Us

Europe, Middle East, India and Africa
polymerchemistry.nl@nouryon.com

Asia Pacific
polymerchemistry.ap@nouryon.com

Americas
polymerchemistry.na@nouryon.com

The Nouryon logo consists of a stylized orange 'N' followed by the word 'ouryon' in a lowercase, sans-serif font, all in orange.